How To add the redundant fan kit

46.G54FK.001

1

Open the chassis and disconnect the rear fan cable from the motherboard and then unplug the black fan from the blue fan holder.

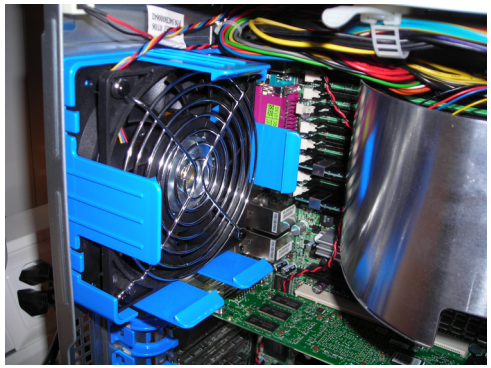

2

Put the add-on fan in the rear position and then put again the main fan with the wicket in the same order shown in this picture:

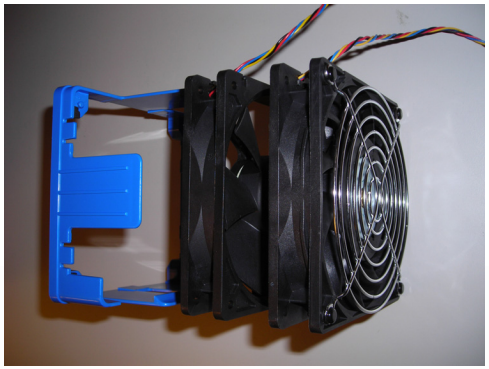

3

Be sure all the two fans are securely lock in the holder

4

Place the redundant fan inside the chassis and connect both cables to the motherboard, keeping attention at the cables order.

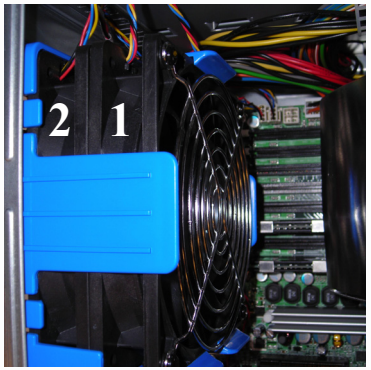

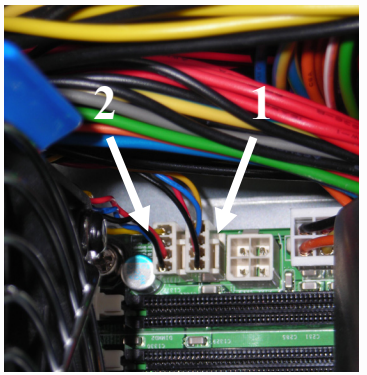

All the How To guides can be found on http://support.acer-euro.com/documents/howto/

SO.G54FK.001 - G540 redundant rear fan. Contains the second non hot swap fan.